


Model: CLASSIC LINE

Order number: 29-201267-057

Correct use: Passive storage

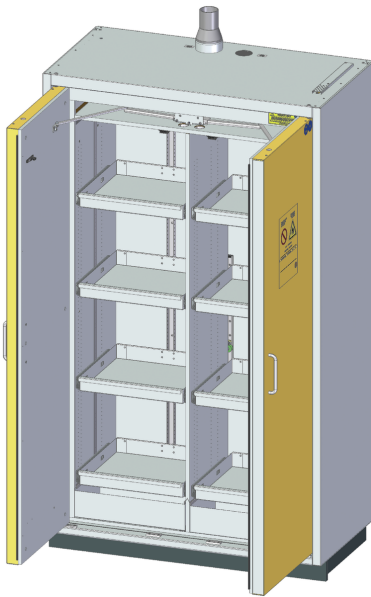

classical door technology (door handle) for the storage of flammable liquids type testing by MPA/TÜV SÜD according to DIN EN 14470-1, DIN EN 16121 and DIN EN 16122, EK5/AK4 09-10:2009 and AfPS GS 2014: 01 PAK mark of approval: GS/CE mark, high quality mark of approval by TÜV SÜD construction and colour:

- outer carcass sheet steel, RAL 7035
- doors sheet steel, RAL 1018
- inner carcass of decor panels, RAL 7035 fittings and features:
- doors close automatically in case of fire
- doors remain open in every position
- cylinder lock for safe access
- centre partition wall
- 2x 1 bottom tray sheet steel, RAL 7035
- 2x 4 pull-out shelves sheet steel, RAL 7035
- exhaust air connection socket on the cabinet roof
- visual inspection of the ventilation opening
- earthing connection on the cabinet roof
- interior fittings conductively connected with carcass
- adjustable foot for level adjustment
- set-back base, RAL 7015 further technical information: www.dueperthal.com

Category:

Type 90 - flammable liquids

Model size	XL
Model type	PRO (pull-out shelves)
Outer width [mm]:	1.194
Outer depth [mm]:	612
Outer height [mm]:	2.085
Net weight [kg]:	470,00
Number of storage levels	4
Number of storage areas per storage level	2
Door operation	classical technology
Door technology	wing door technology